

Alcove Bathtub AFR

VTIC60(30/32)A(L/R)-10



Installation Manual

Please read notices on following page



Version: 2.1.0

Dimensions of fixtures are approximate and may vary ± 6mm (1/4"). Structure measurements must be verified against the unit to ensure proper fit. PRODUCT SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE.

Alcove Bathtub AFR

VTIC60(30/32)A(L/R)-10

MATERIALS AND TOOLS REQUIRED

GENERAL INSTRUCTIONS

- Read this guide carefully and completely before proceeding.
- It is recommended that you wear safety glasses during the installation.

NOTICE

- For best results, we recommend that a licensed, professional plumber installs this unit.
- Please read over these instructions thoroughly before beginning installation.
- Make sure that you have all tools and supplies needed to complete the installation.
- Please check local building code.
- Keep receipts (proof of purchase and place of purchase) for this product. The receipt is required should it be necessary to request warranty parts.

MAINTENACE & CARE

- For best results, we recommend that a licensed, professional plumber installs this unit.
- Do not use any abrasive chemical or corrisve powders, detergents, window cleans, disinfectants or any other strong cleaners on your product as they will destroy the finished and therefore void the warranty.



ICARUS





Round Head Screws 1 1/4"



Drill



Caulking Gun



Tape Measure



Adhesive



Sealant



Square



V-notched Trowel (1/4")

Holder

Extension Bit



Drill Bit 3/16"



Pencil

Phillips Bit

Drop Cloth



Alcove Bathtub AFR

ICARUS

VTIC60(30/32)A(L/R)-10


ATTENTION!


Install Skirt/arpon support brackets before installing bathtub in alcove.


Flip the skirted bathtub upside down. Be sure to set on a soft surface that will not scratch the finished surface of the tub.

INSTALLING SUPPORT BRACKETS

- **1A.** Remove and check for the alcove apron brackets (x 2) and Screws (x 8).
- **1B.** Measure 10 cm from the bath leg to Identify the position of support bar.

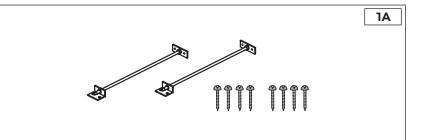

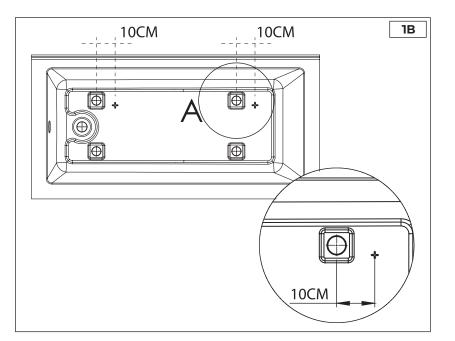

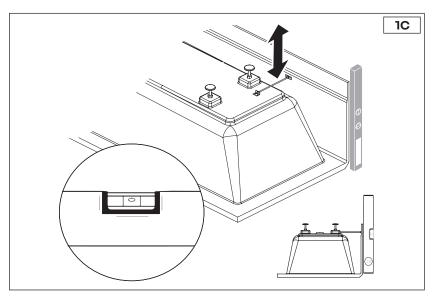

3

1C. Layout the support bars. insert the short end of the support bar into the bracket on the unfinished side of the the tub skirt. (Arrow is pointing to the top of the tub)

Use a level or carpenter's square to make sure the finished side of the skirt is vertical to the ground.


Dimensions of fixtures are approximate and may vary ± 6mm (1/4"). Structure measurements must be verified against the unit to ensure proper fit. PRODUCT SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE.

Alcove Bathtub AFR


VTIC60(30/32)A(L/R)-10

1D. With the apron vertical to the ground, fix the support braket with the 2 deliverd screws into the bracket support base (Reinforced base board on the bottom of the tub).

Vida

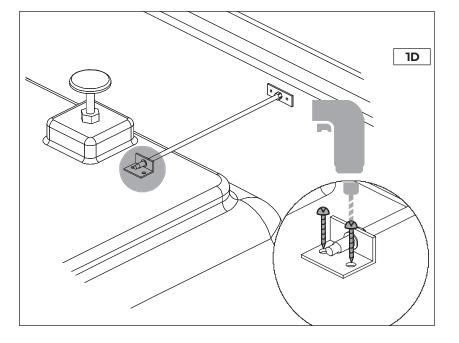

1E. With the apron vertical to the skirt, fix the support braket with the 2 deliverd screws into the reinforced skirt part.

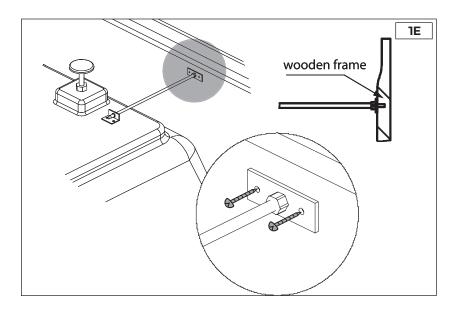


Alcove Bathtub AFR


VTIC60(30/32)A(L/R)-10

1F. With the apron vertical to the ground, fix the support braket with the 2 deliverd screws into the bracket support base (Reinforced base board on the bottom of the tub).

Vida

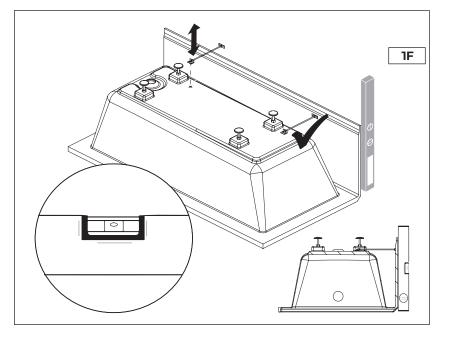

1G. Once all two support brackets are installed follow the skirted alcove bathtub installation guide to complete the remainder of the installation.

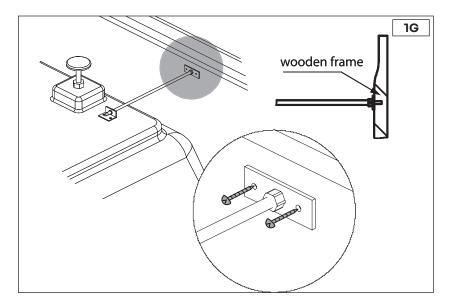



ATTENTION!


REMOVE ANY OBSTRUCTIONS

PREPARATION & FRAMING


2A. Construct the alcove in ccordance with your bathtub dimensions.

Alcove Bathtub AFR

VTIC60(30/32)A(L/R)-10

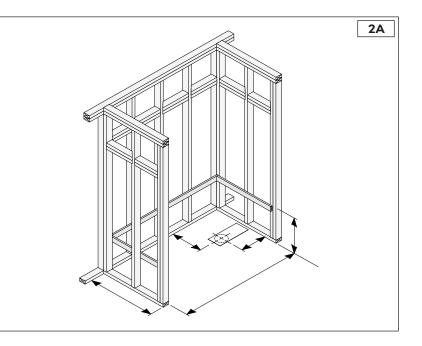

2B. Make sure the studs are straight and square

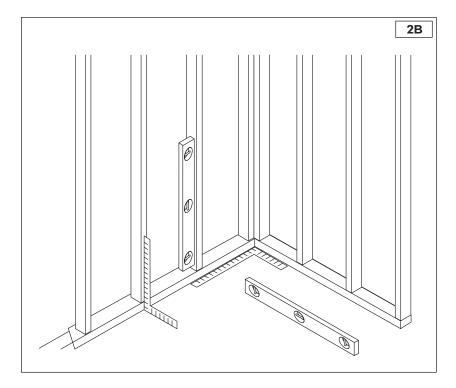

ATTENTION!


Pictures for reference only. For actual measurements, refer to the product's specification sheet.

ICARUS



Alcove Bathtub AFR

VTIC60(30/32)A(L/R)-10

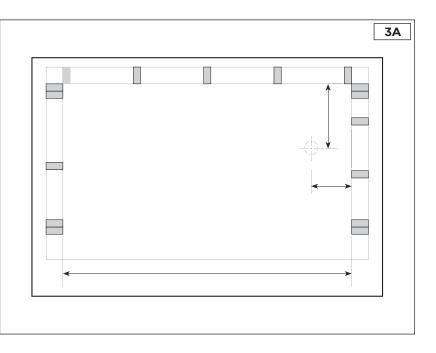

ATTENTION!

REMOVE ANY OBSTRUCTIONS

POSITIONING BATHTUB

3A. After carefully verifying the drain location on the floor. Prepare floor rough-in accordingly.

ATTENTION!

Pictures for reference only. For actual measurements, refer to the product's specification sheet.

7


Dimensions of fixtures are approximate and may vary ± 6mm (1/4"). Structure measurements must be verified against the unit to ensure proper fit. PRODUCT SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE.

 
BATHTUB INSTALLATION


4A. If the floor is not flat or level, it is recommended to deposit a mortar bed where the base will be positioned.

Alcove Bathtub AFR

VTIC60(30/32)A(L/R)-10

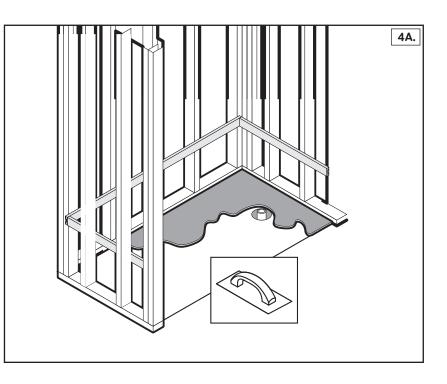



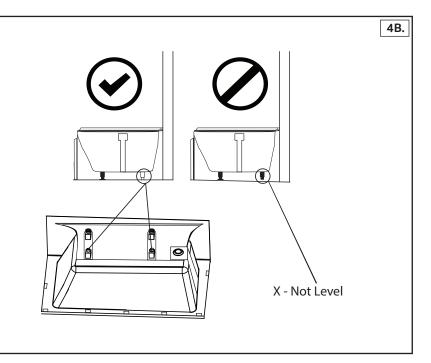

ATTENTION!

The bath tub must primarily be supported by the tubs feet on the floor


LEVELING THE BATHTUB

5A. Use a level and a bracket to make sure that the bathtub is straight and perpendicular.

ICARUS

Alcove Bathtub AFR

VTIC60(30/32)A(L/R)-10

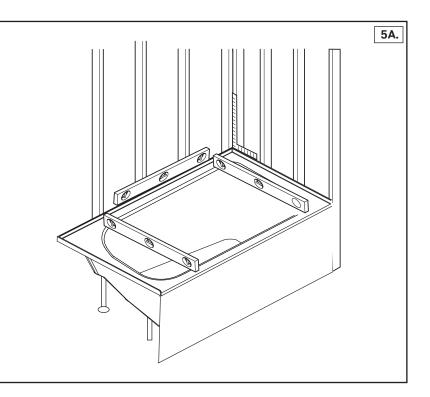



ATTENTION!

Bathtub bottom must be in contact with a perfectly straight and level surface.

SECURING THE BATHTUB

6A. Install the drain/Overflow assembly onto the bathtub.

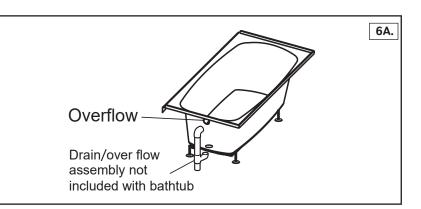

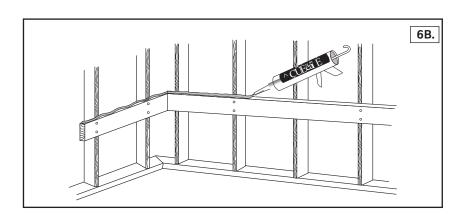

6B. Apply construction adhesive along the top of the horizontal support stud.

ATTENTION!

Tiling Flange is not designed to carry the weight of the bathtub.

Alcove Bathtub AFR


VTIC60(30/32)A(L/R)-10

6C.

6C. Apply Silicone under the bathtub's legs to attach to the floor and reduce the risk of squeaks.

Vida

- Pencil outline of feet
- **6D.** Put the bathtub in place and fix it against the vertical studs.

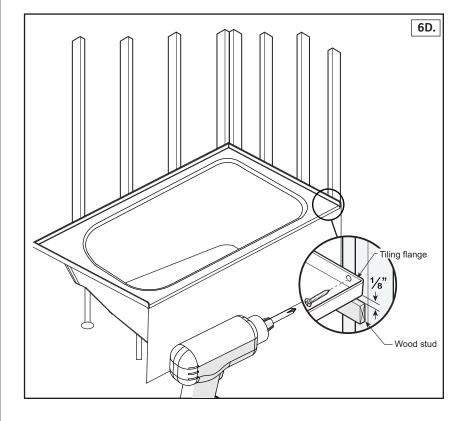

ATTENTION!

Tiling Flange is not designed to carry the weight of the bathtub.

ICARUS

Alcove Bathtub AFR

VTIC60(30/32)A(L/R)-10


SILCONING THE BATHTUB

7A. Apply 100% silicon sealer to any gaps in the corners and seal the joint between the bathtub and the wall finish.

ATTENTION!

Allow the sealant to dry for at least 24 hours.



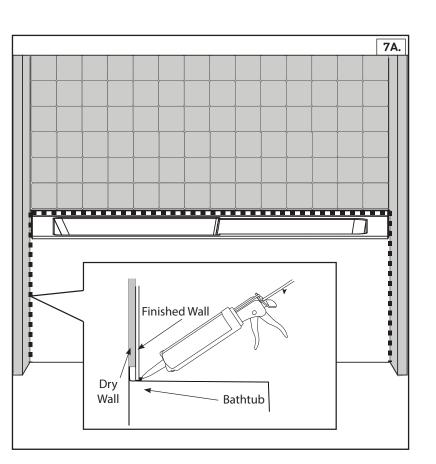

CORRECT INSTALLATION

- 1. Framing
- 2. Dry Wall
- 3. Finished Wall
- 4. Sealant
- 5. Bathtub
- 6. Integrated Tile Flange

